

# Intelligent Circuit Breaker iP-CB Basic Connection

## IMPORTANT

Always set the iP-CB trip current with the header to be LOWER than the main system maximum current output.

