








IMPORTANT

Always set the iP-CB trip current with the header to be LOWER than the main system maximum current output.

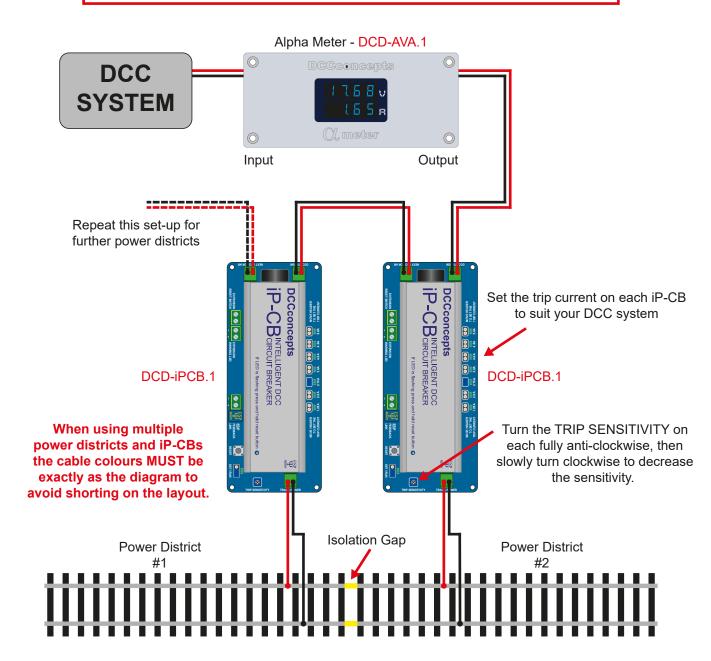

If a short occurs between two power districts on the layout, swap the output wires from the iP-CB that is connected to that power district.