



Please see the data sheet on **Intelligent Circuit Breaker Changing An iP-CB CV Setting** before attempting to change any CVs.

**CV66**

This CV sets whether the iP-CB is ON or OFF when the layout is first powered up.

The default value is **0**, in which the iP-CB is always **ON** when the layout is powered up.

The range:

CV66 = **0** - the iP-CB is always **ON** when the layout is powered up.

CV66 = **1** - the iP-CB is always **OFF** when the layout is powered up.

**Please think carefully before changing any CVs on the iP-CB**