


## NCE PowerCab & PCP Faceplate, Alpha Power & Alpha Box With Alpha Central

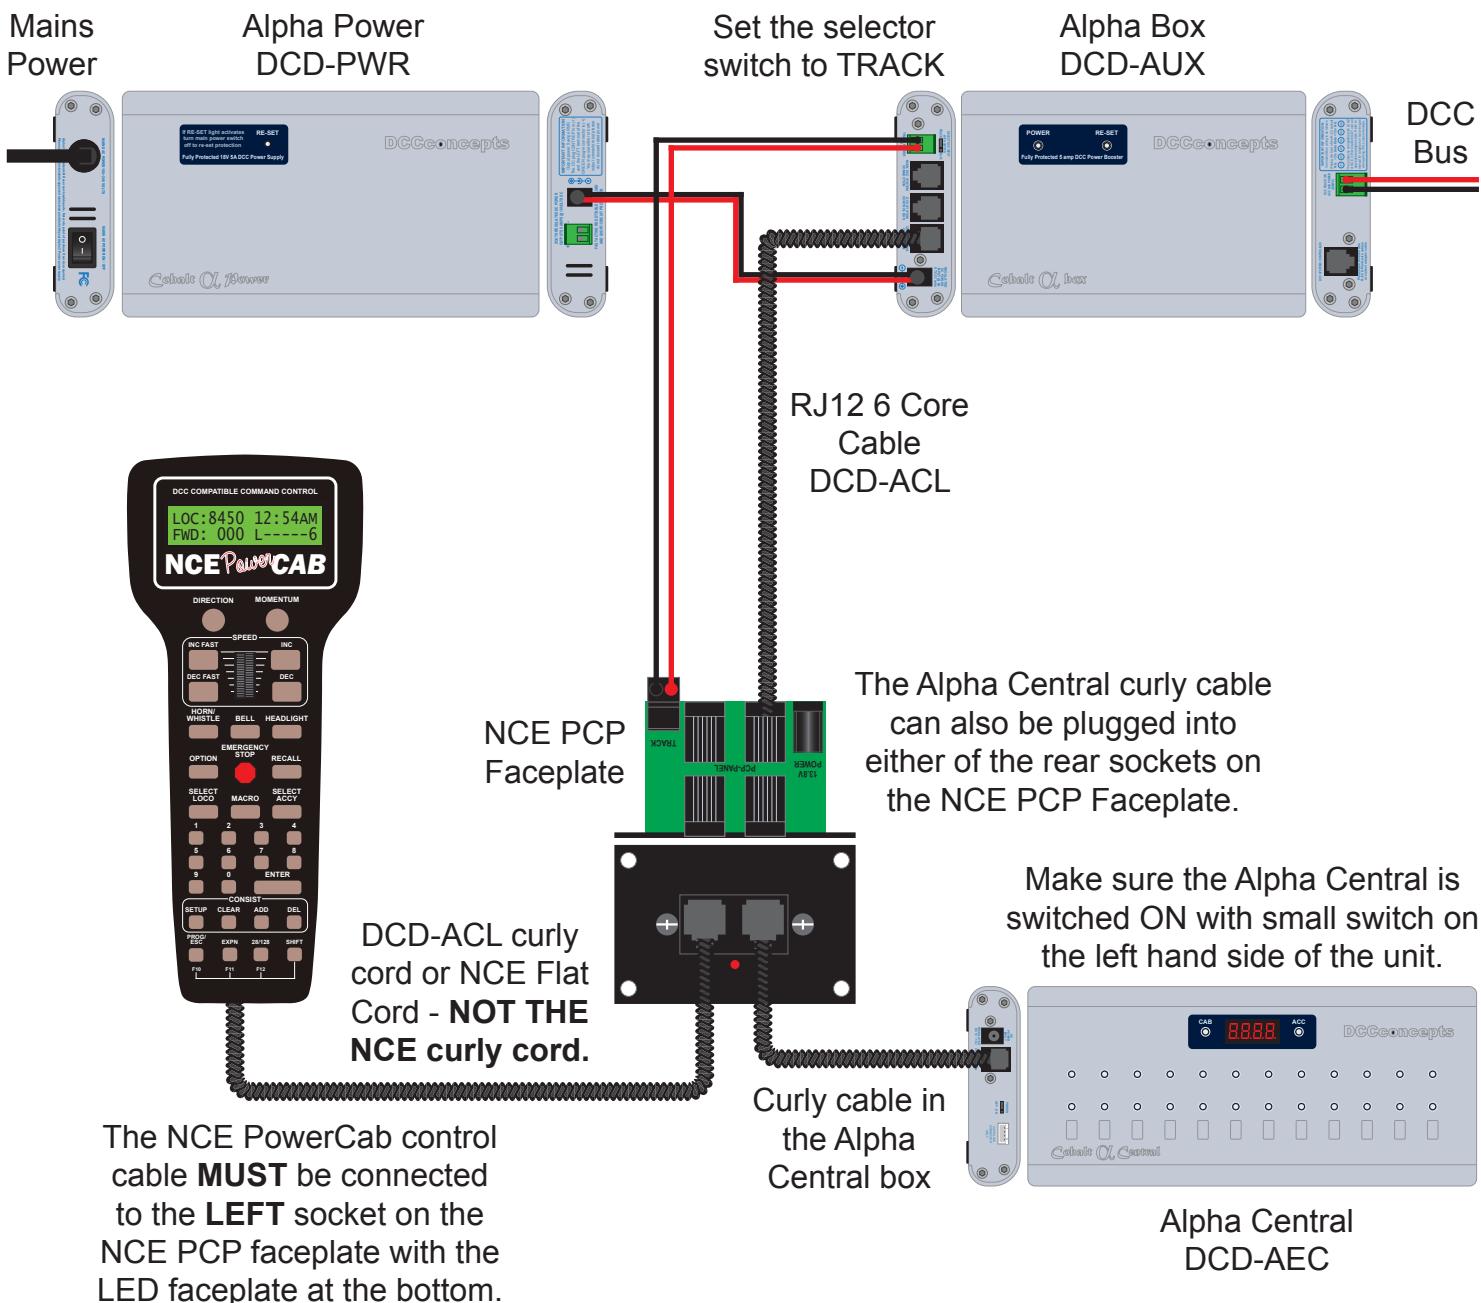

The NCE PowerCab control cable **MUST** be connected to the **LEFT** socket on the NCE PCP faceplate with the LED faceplate at the bottom.

**WARNING**  
Do not place any power supply in to the faceplate input DC power socket