


ESP aegis Adding Alpha Central And Alpha Panel

Note: The NCE PowerCab is NOT supplied with the aegis system.


RJ12 6-Pin Curly Cable DCD-ACL, in the Alpha Central box.

Switch set to STD BUS

Alpha Panel DCD-DAP

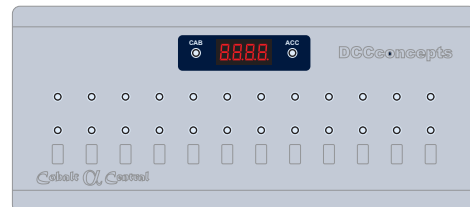

Alpha Central DCD-AEC

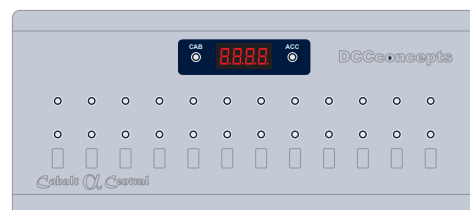


ESP Ψ aegis 5 Amp Wireless System for PowerCab DCC-AEGIS.SET


CAB PWR OUT Switched To ON
Red Headers Switched To OFF



aegis Power Supply
24V 5 Amps
DCP-24.5

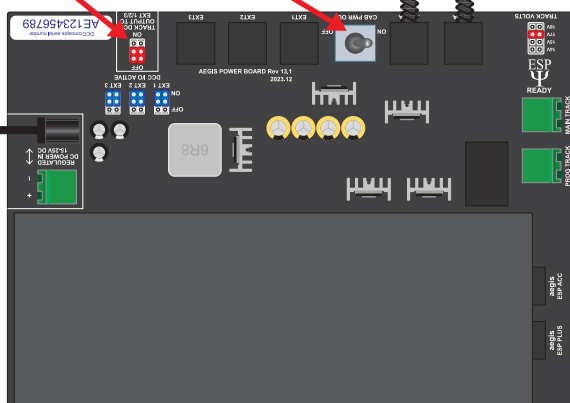


RJ12 6pin Curly Cord For NCE Powercab and Cobalt Alpha DCD-ACL

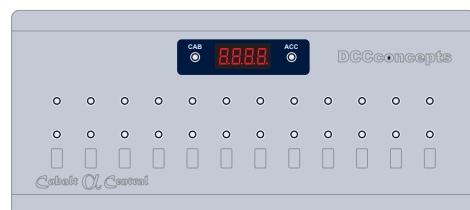

Alpha Central DCD-AEC

2 The NCE PowerCab **MUST** be set to CAB ADDRESS

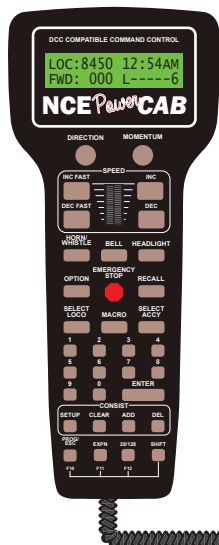

aegis Wireless Transmitter Unit

