



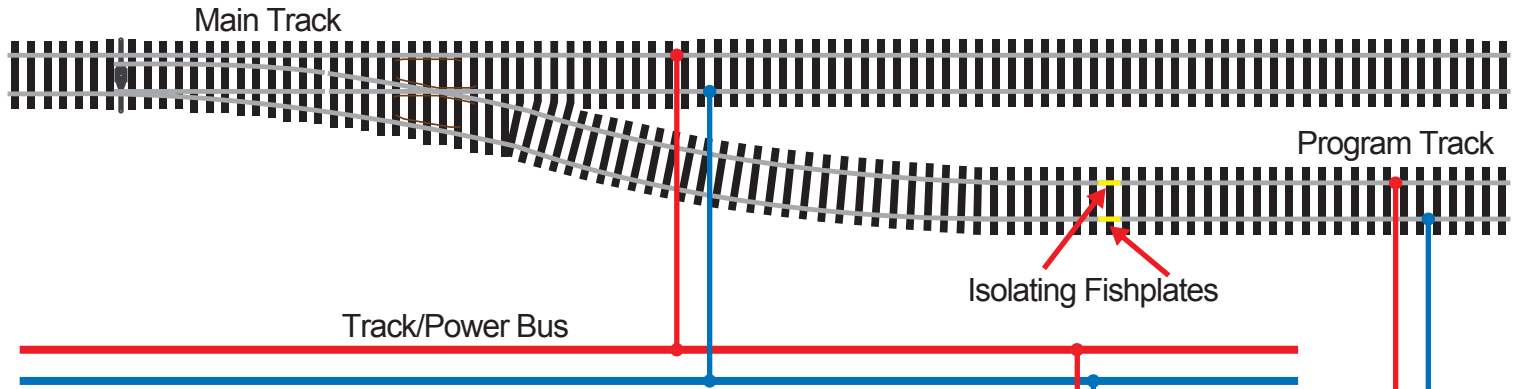

ESP aegis Standard Set-Up To Main Track And A Joined Programming Track



aegis Power Supply
24V 5 Amps
DCP-24.5

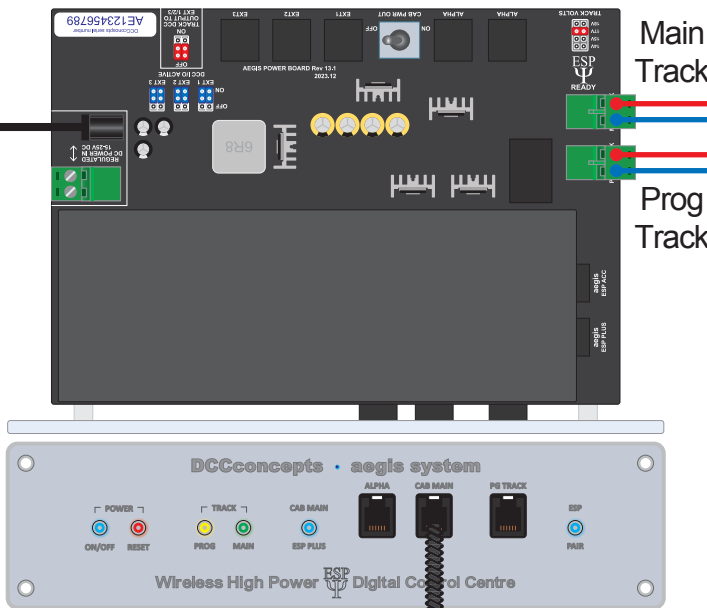

ESP Ψ aegis 5 Amp Wireless System for PowerCab
DCC-AEGIS.SET

NCE PowerCab plugged into the CAB MAIN socket on the front

NCE PowerCab
NCE-Pcab



The Wireless Master PowerCab **MUST** be set to CAB ADDRESS

2

RJ12 6pin Curly Cord For NCE Powercab and Cobalt Alpha DCD-ACL

Note: The NCE PowerCab is NOT supplied with the aegis system.